

Blu-ray Recorders: When editing or deleting scenes, is there an UNDO function?

No. Once you select "Execute" to perform your edit or deletion, the results are final. Always keep your original source material (camcorder, memory cards) as a backup, in case you make a mistake.

Unique solution ID: #1151

Author: Dave Walton

Last update: 2010-01-21 08:28